






ALUMINIUM FLAT ROOF LIGHT **FITTING INSTRUCTIONS**

ASSEMBLY INSTRUCTIONS

Please read these assembly instructions before beginning any installation work. Install as recommended otherwise the unit may not function properly and any warranty, written or implied, will be void.


The assembly instructions are only for the attention of qualified installers who are trained and qualified in window and doors installation techniques, and are aware of the manufacturer's recommendations for the system used.

Typical Fixed Flat Rooflight Installation Guide

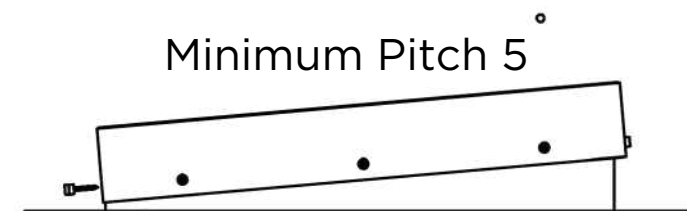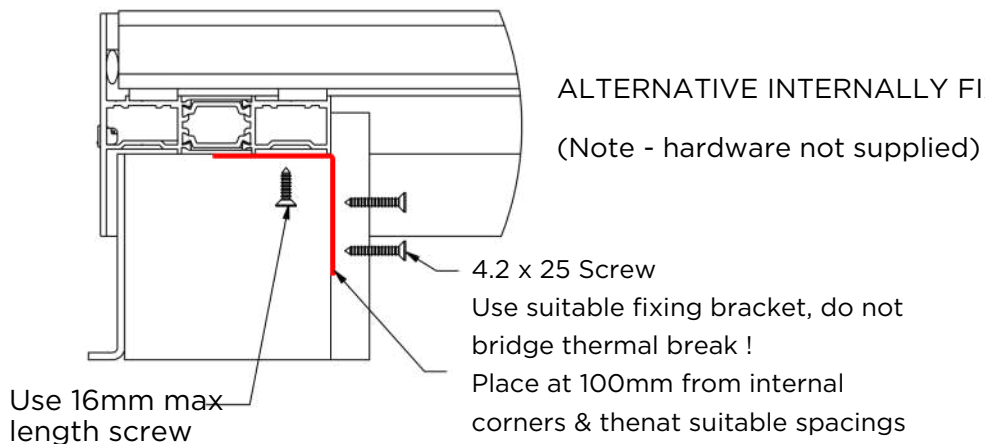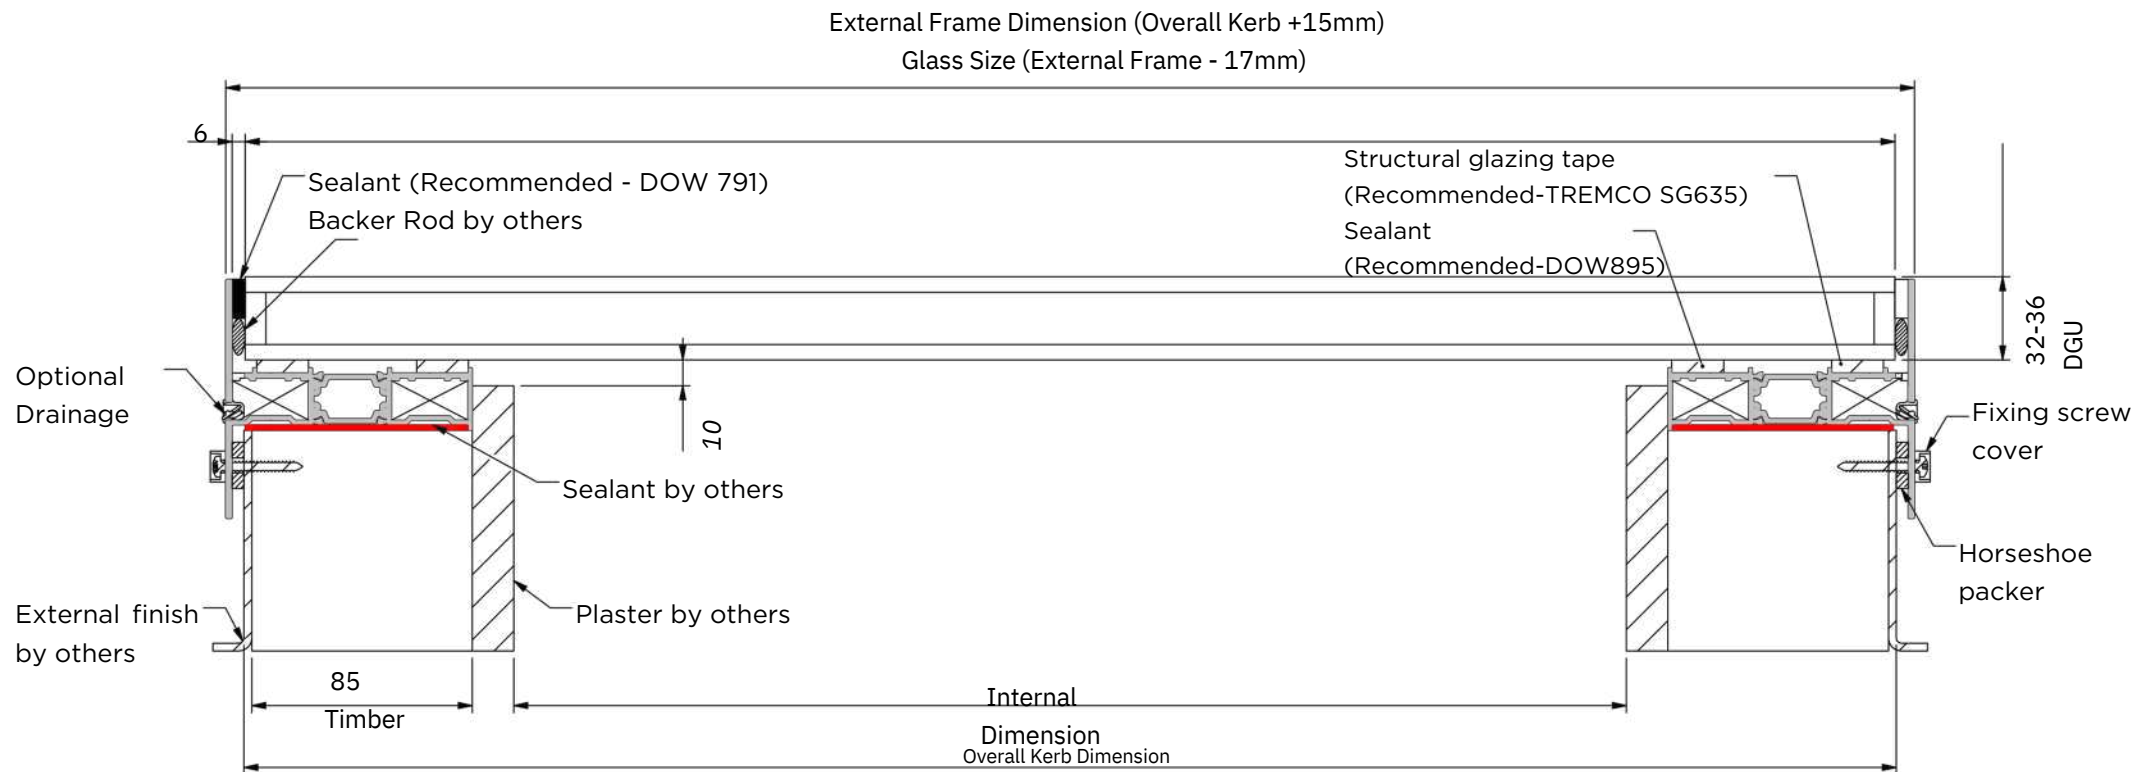


1. Apply thick bead of silicone all the way around the top of timber kerb/upstand.


Timber upstand requires a minimum pitch of 5 to enable water to run off the rooflight

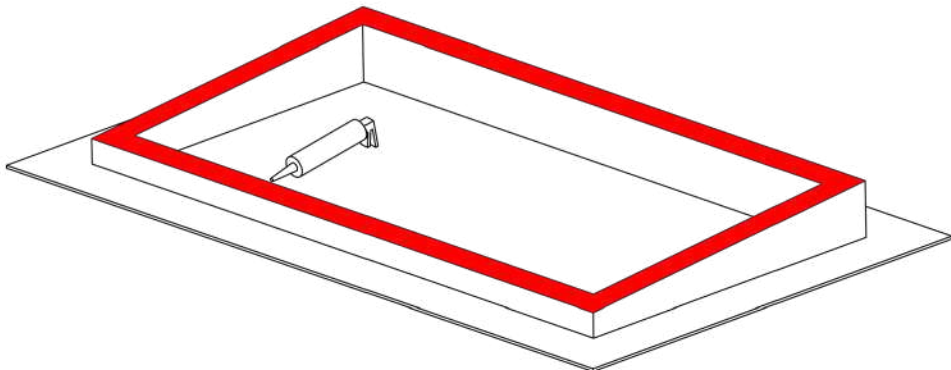


2. Position the rooflight over the kerb/upstand and lower into position.

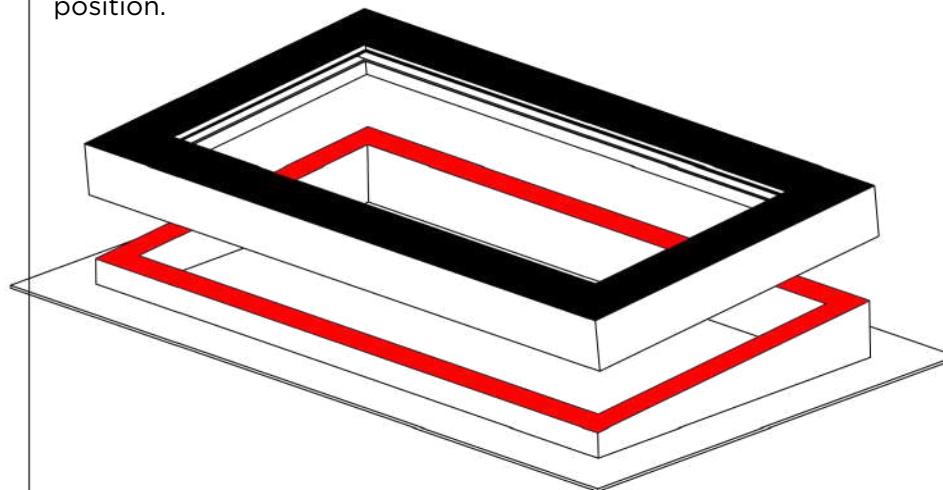

3. Pre drill fixing holes through aluminium and timber kerb/upstand at 100mm from each corner, then at regular intervals.

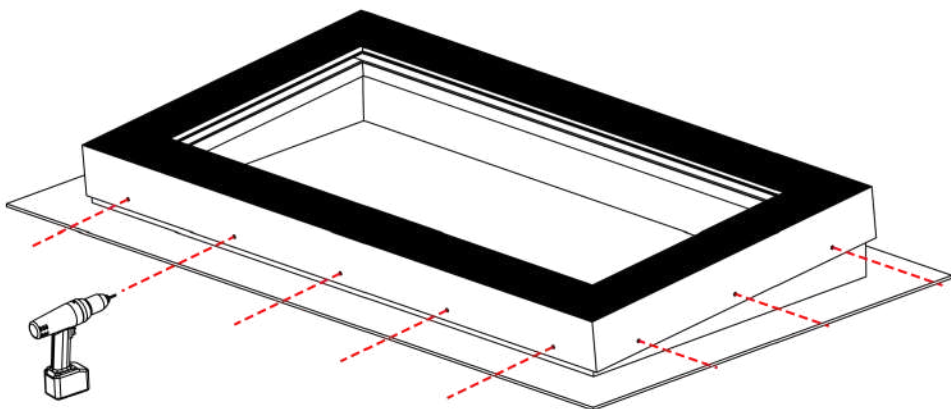

4. Use suitable fixing screws, with cover caps and horse shoe packers all the way around to secure frame in place.

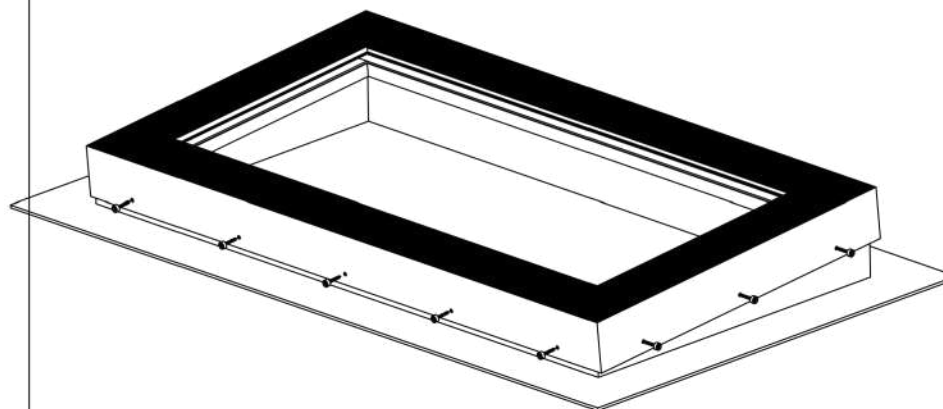

SOVU