




Sovu Flat Rooflight

INSTALLATION GUIDE




Simple yet sleek roof system, providing seamless sky views and maximum daylighting to flat roof spaces.

Typical Fixed Flat Rooflight Installation Guide

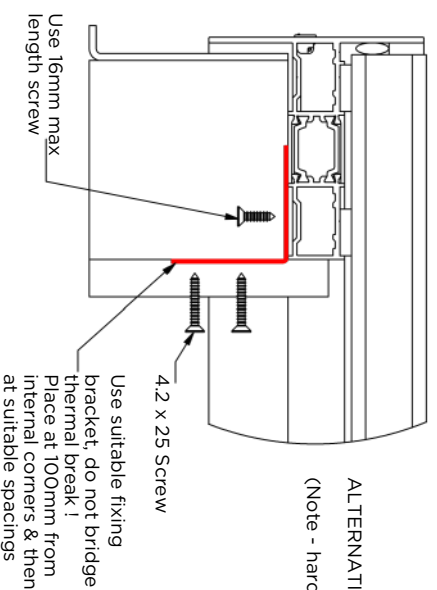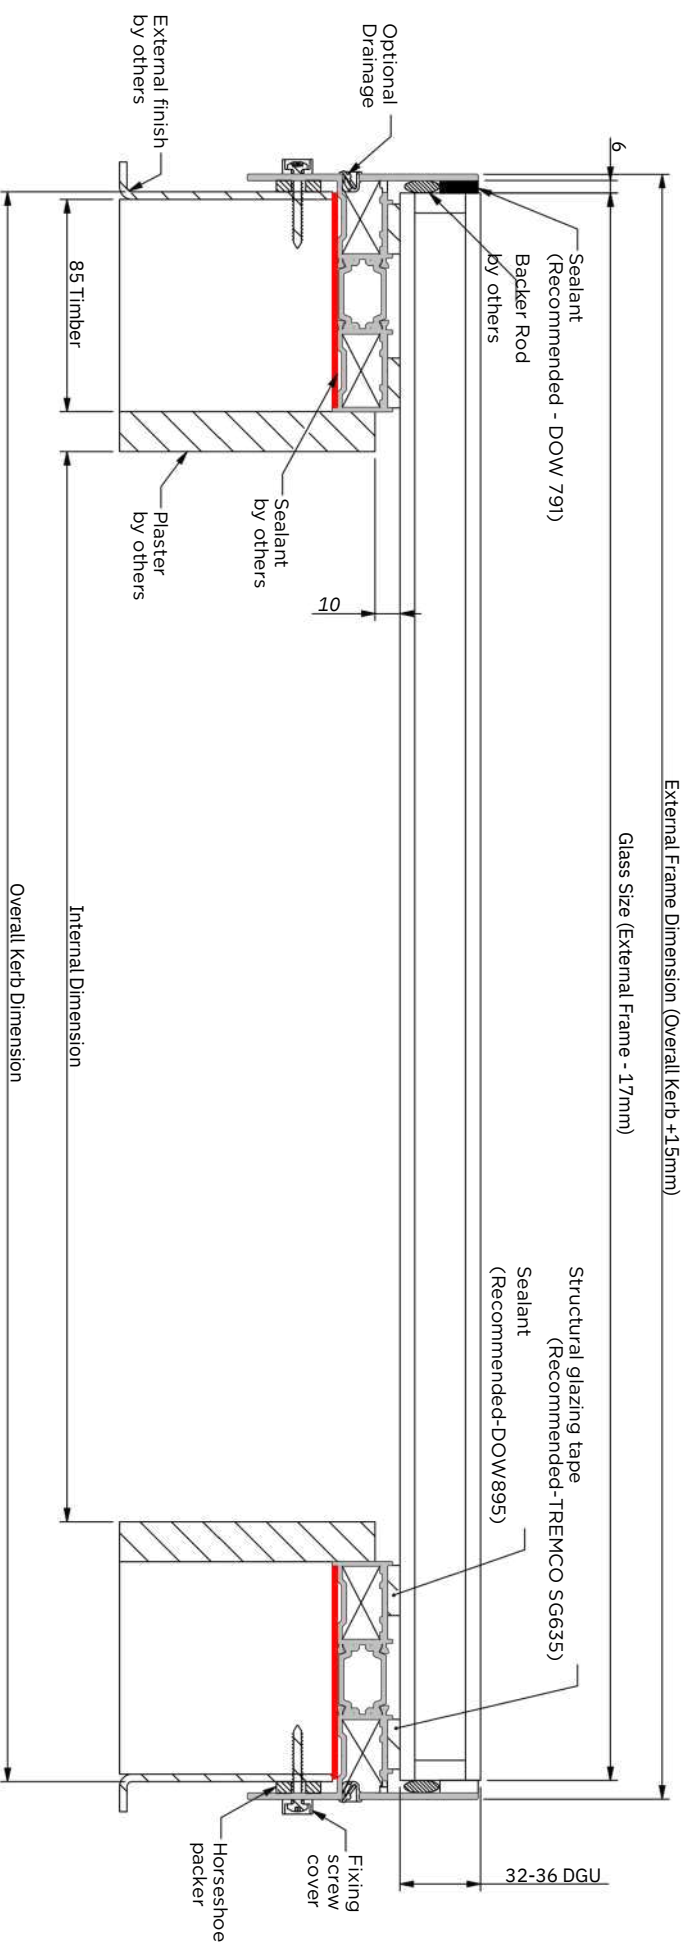


1. Apply thick bead of silicone all the way around the top of timber kerb/upstand.


Timber upstand requires a minimum pitch of 5 to enable water to run off the rooflight

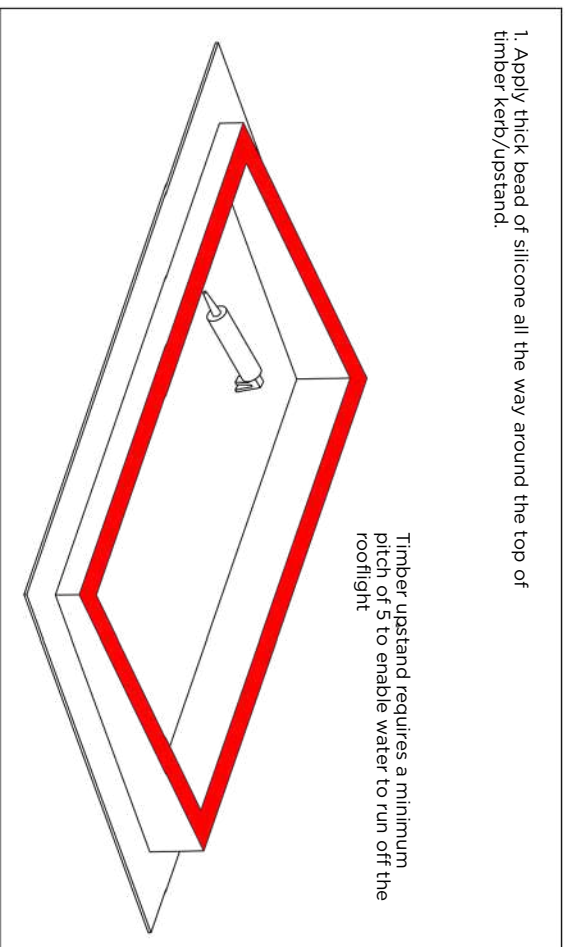


2. Position the rooflight over the kerb/upstand and lower into position.

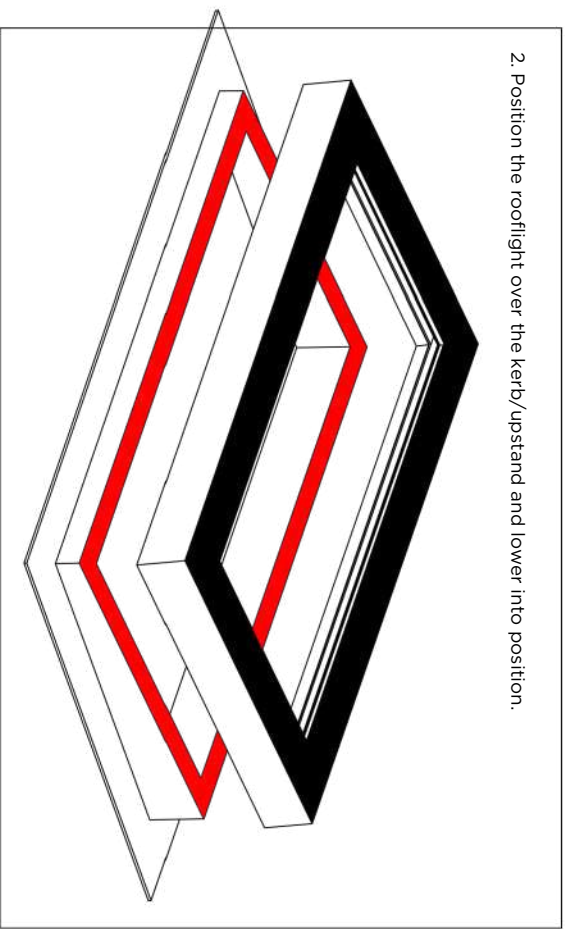

3. Pre drill fixing holes through aluminium and timber kerb/upstand at 100mm from each corner, then at regular intervals.

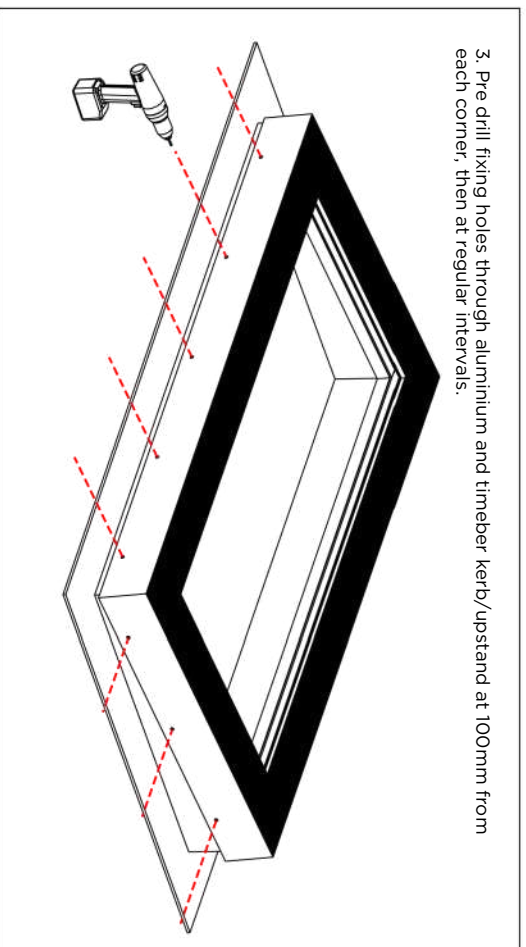


4. Use suitable fixing screws, with cover caps and horse shoe packers all the way around to secure frame in place.

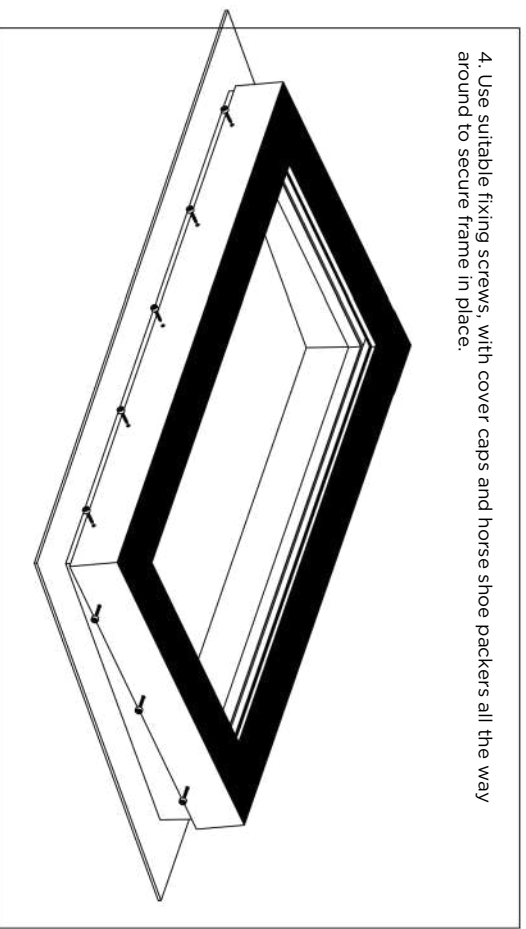


Fabrication Detail


Cleat ALN-000001

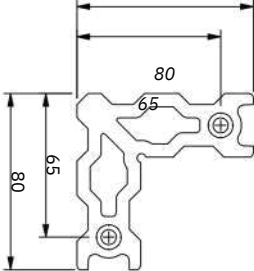

Use ROOF-JIG.1 to prepare cut profiles
drill using 12mm drill bit

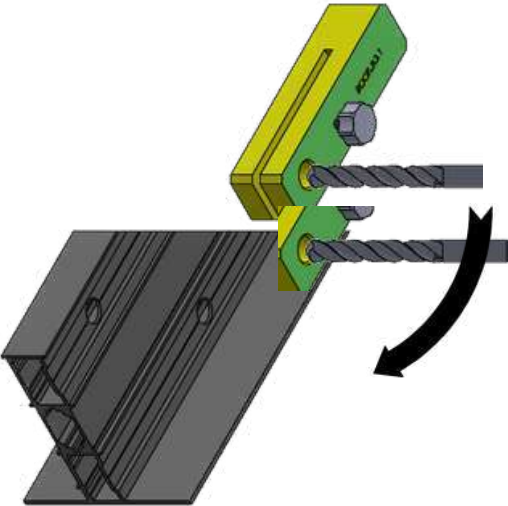


Profile
RWN-TH-001.7016
RWN-TH-001.9005

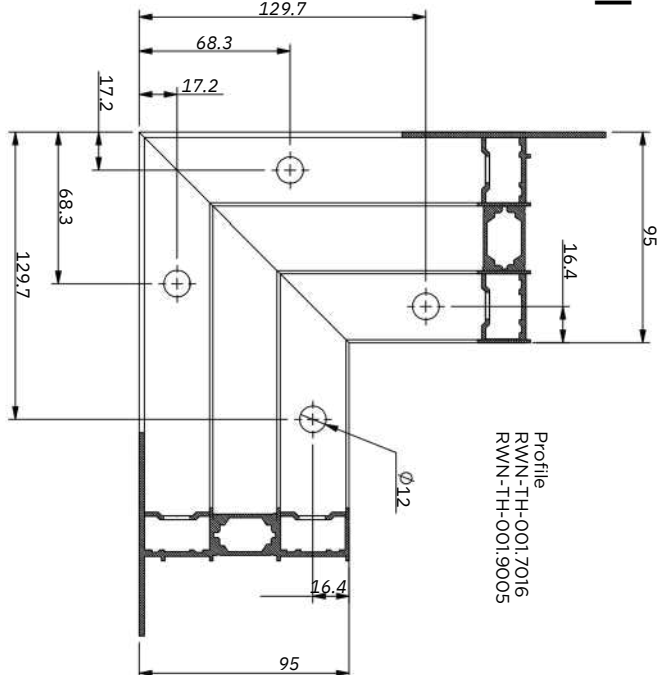

Seal corners using
low modulus silicone
sealant

Note correct orientation
for cleat - countersink facing upward
Screws M8 x 16
DM 7991

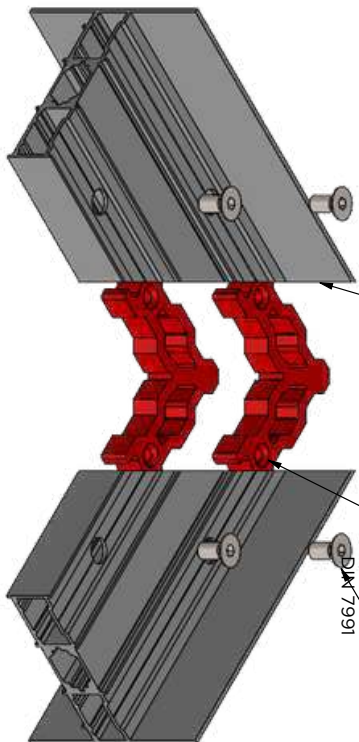

Optional Drainage Detail

Space drainage caps on outer face at 150mm from corners & approx 450mm centres

